

## Tips & recommendations



Tree protectors are not included in this slackline-kit and must be purchased additionally.


Carpet-pieces could be used as tree protectors.



The slackline area should be soft and even. To the left and the right side of the slackline you should have at least 1.5m of open space.




Trees to which the slackline is being attached should have a diameter of at least 32 cm (=100 cm perimeter).

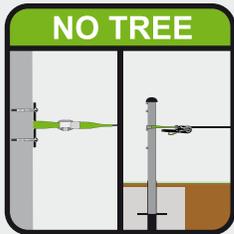

More information on slackline poles and wall holders can be found at:

[www.slacktivity.com](http://www.slacktivity.com)

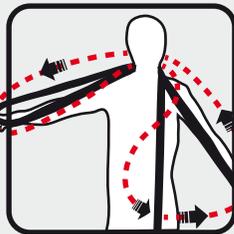

Do not wind the slackline around your elbow but rather roll it over your shoulder switching back and forth between your right and left side. This way the slackline won't get tangled up.




To ensure a proper long-term function, ratchets and carabiners should be lubricated occasionally.

## Assembly instructions V1.0

Please check regularly for updates of this manual on [slacktivity.com](http://slacktivity.com)




Wrap a tree protector around the tree at the desired height.

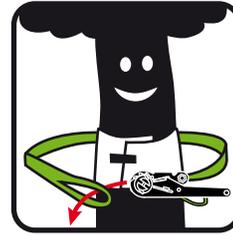


Put the ratchet through the loop at the end of the sling and attach it to the tree by pulling it tight.



Fix the slackline through the end loop on another tree in the same way.

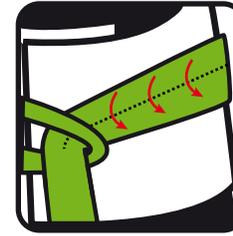


Fold the slackline where it runs through the end loop.

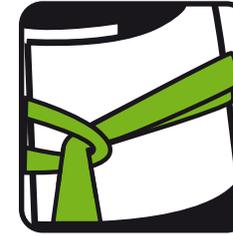


This way the slackline will be aligned straight.




To prevent friction damage on trees, it is very important to center the slackline directly on the tree in the direction of the line.

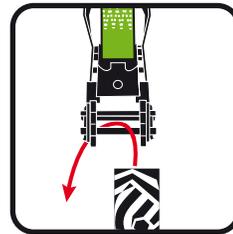


Insert the slackline top down through the ratchet slit. Make sure that the slackline is not twisted.

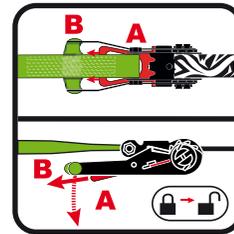

Pull the metal lever (A) to unlock the ratchet and open the ratchet lever (B).

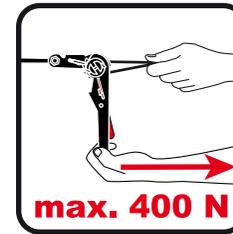

Tighten the slackline as hard as you can with one hand and operate the ratchet with the other. Tighten the slack line as hard as you like it to be. A hand force of 400N (=40kg) must not be exceeded.

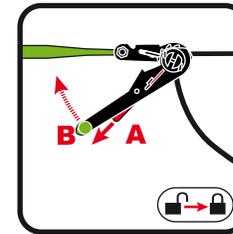

Pull the metal lever (A) and close the ratchet lever (B) to lock the ratchet. The ratchet lever is closed if it can't be opened anymore without pulling the metal crank.

The lever of the ratchet should be positioned downwards.

## SLACKTIVITY






© by SLACKTIVITY

## Disassembly instructions

Pull the metal lever (A) and open the ratchet lever (B). Bring the ratchet to full extension with pulled metal lever. In doing so a pressure point has to be overcome. With opening the ratchet the slackline might be detensioned with a bang depending on the pretension.

A gentle detensioning can be attained by using a softRelease-System. More information: [www.slacktivity.com](http://www.slacktivity.com)

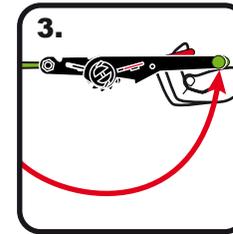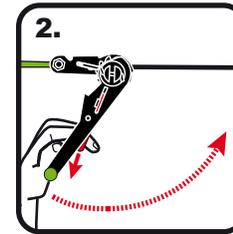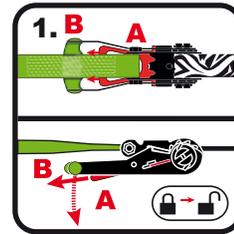

## Slackline-Kit «Minimum»

## Safety advice

English

At public places the slackline must never be left unattended.


The slackline must only be used for balancing.



Use tree protectors any time to prevent damage on trees.



Avert your eyes from the ratchet when loosening a strongly tightened slackline, since sparks can occur during that process. This might happen with any kind of slackline-kits that work with a ratchet system, so be aware!

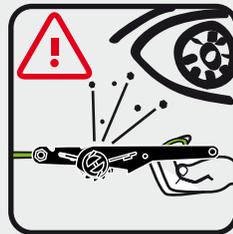

It is important that the slackline is wound up evenly on the ratchet spindle to avoid damage and abrasion of the slackline.



Prior to each use check the slackline in particular for damage of the ribbon. A damaged slackline-set must not be used in any case! The slackline must be replaced after three years at the latest.



When attaching the slackline at artificial objects make sure that these objects resist tensions up to 7kN (=700kg) with double safety margin. Use tree protectors here too, to avoid damaging the tree loop and the object.

